

 

 





 




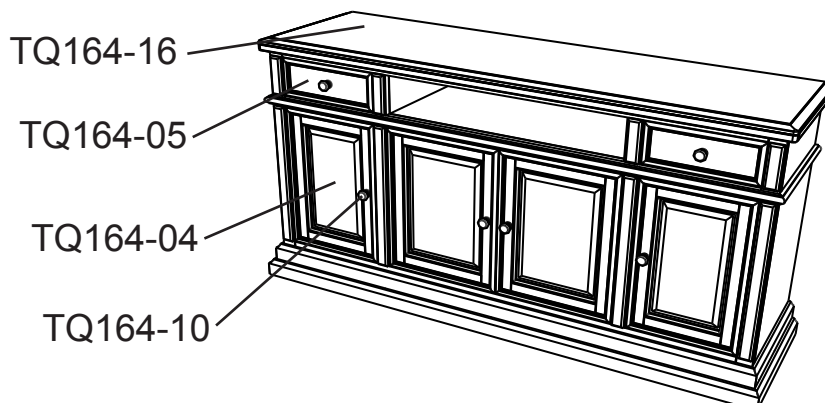
Assembly Instructions

TQ164

65" MEDIA BASE

PARTS LIST

PART NO	FIGURE	DESCRIPTION	QTY
TQ164-02		Back Panel	1 pce
TQ164-16		Top Panel	1 pce
TQ164-04		Door	4 pcs
TQ164-05		Drawer	2 pcs
TQ164-08		Hinges	8 pcs
TQ164-21		Magnet Catch	4 pcs
TQ164-22		Leveler	2 pcs
TQ164-10		Wood Knob	6 pcs
TQ164-18		Large Wood Shelf	1 pce
TQ164-181		Small Wood Shelf	2 pcs
TQ164-06		Door Glass	2 pcs
TQ164-26		Door Panel	4 pcs
TQ164-27		Speaker Grill	2 pcs



Assembly Instructions

TQ164
65" MEDIA BASE

Door Panel Door Glass

Turn the door clip for replace the Door Panel to Door Glass

Adjustable Wood Shelf

Side Door Panel is exchange to Speaker Grill

Center Door Glass is exchange to Door Panel

Leveler



Adjust the levelers to level the unit.

COMPLETE VIEW

CARE INSTRUCTION

- ~ Be sure to use the same type of polish consistently. Your furniture will appear cloudy or streaky if oil based or wax based polishes are interchanged.
- ~ Spray your furniture surface evenly. Wipe in a circular motion with a soft clean cloth.

EXTRA PARTS LIST :

NO	DESCRIPTION	FIGURE	QTY
1.	Center Door Panel		2 pcs
2.	Speaker Grill		2 pcs